


### Removal


---

- 1 Remove back window (67-200).
- 2 Slide both covers on bottom corners to one side.
- 3 Slide upper cover between both side ornamental frames to one side.

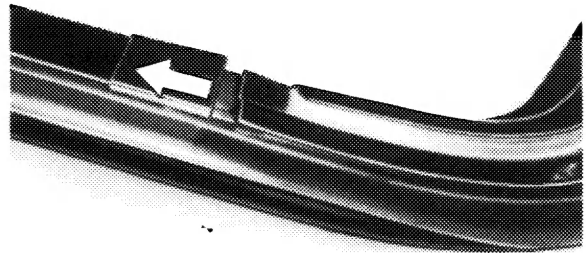

167-12439

- 4 Pry ornamental frame out of rubber frame with a plastic wedge.

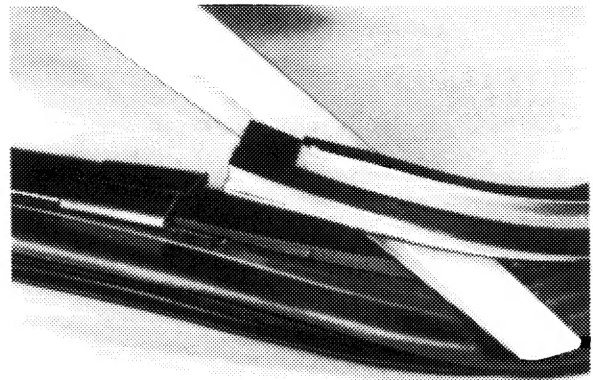

167-12436

### Installation

---

**Note:** Prior to installing ornamental frame, lightly rub slot on rubber frame with benzine.

- 5 Install in reverse sequence.